



victoria ⊕ albert®

volcanic limestone baths

Metal Frames

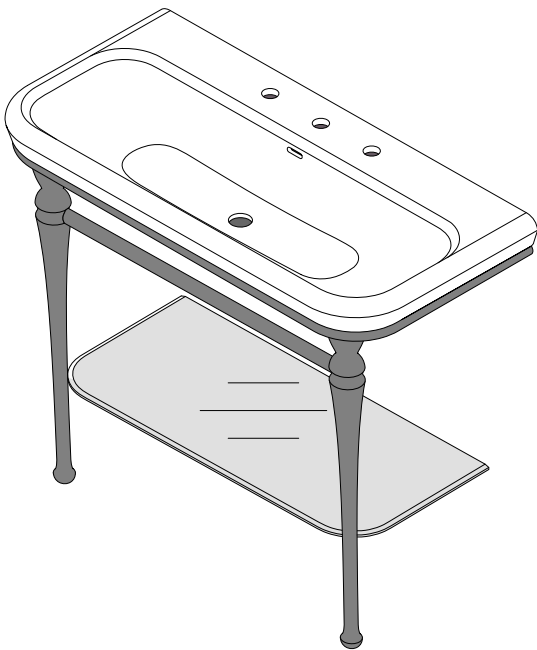


Fitting instructions
Notice d'installation
Instrucciones de montaje
Montageanleitung
Istruzioni di montaggio
Montagehandleiding
Instrukcja montażu
Указания по креплению

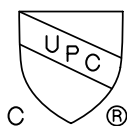



rich in
volcanic
limestone

www.vandabaths.com


! Check wall is sufficient to take weight and use the appropriate fixings (not supplied). Wall may need to be reinforced
● Victoria and Albert Baths recommend coach screws where possible

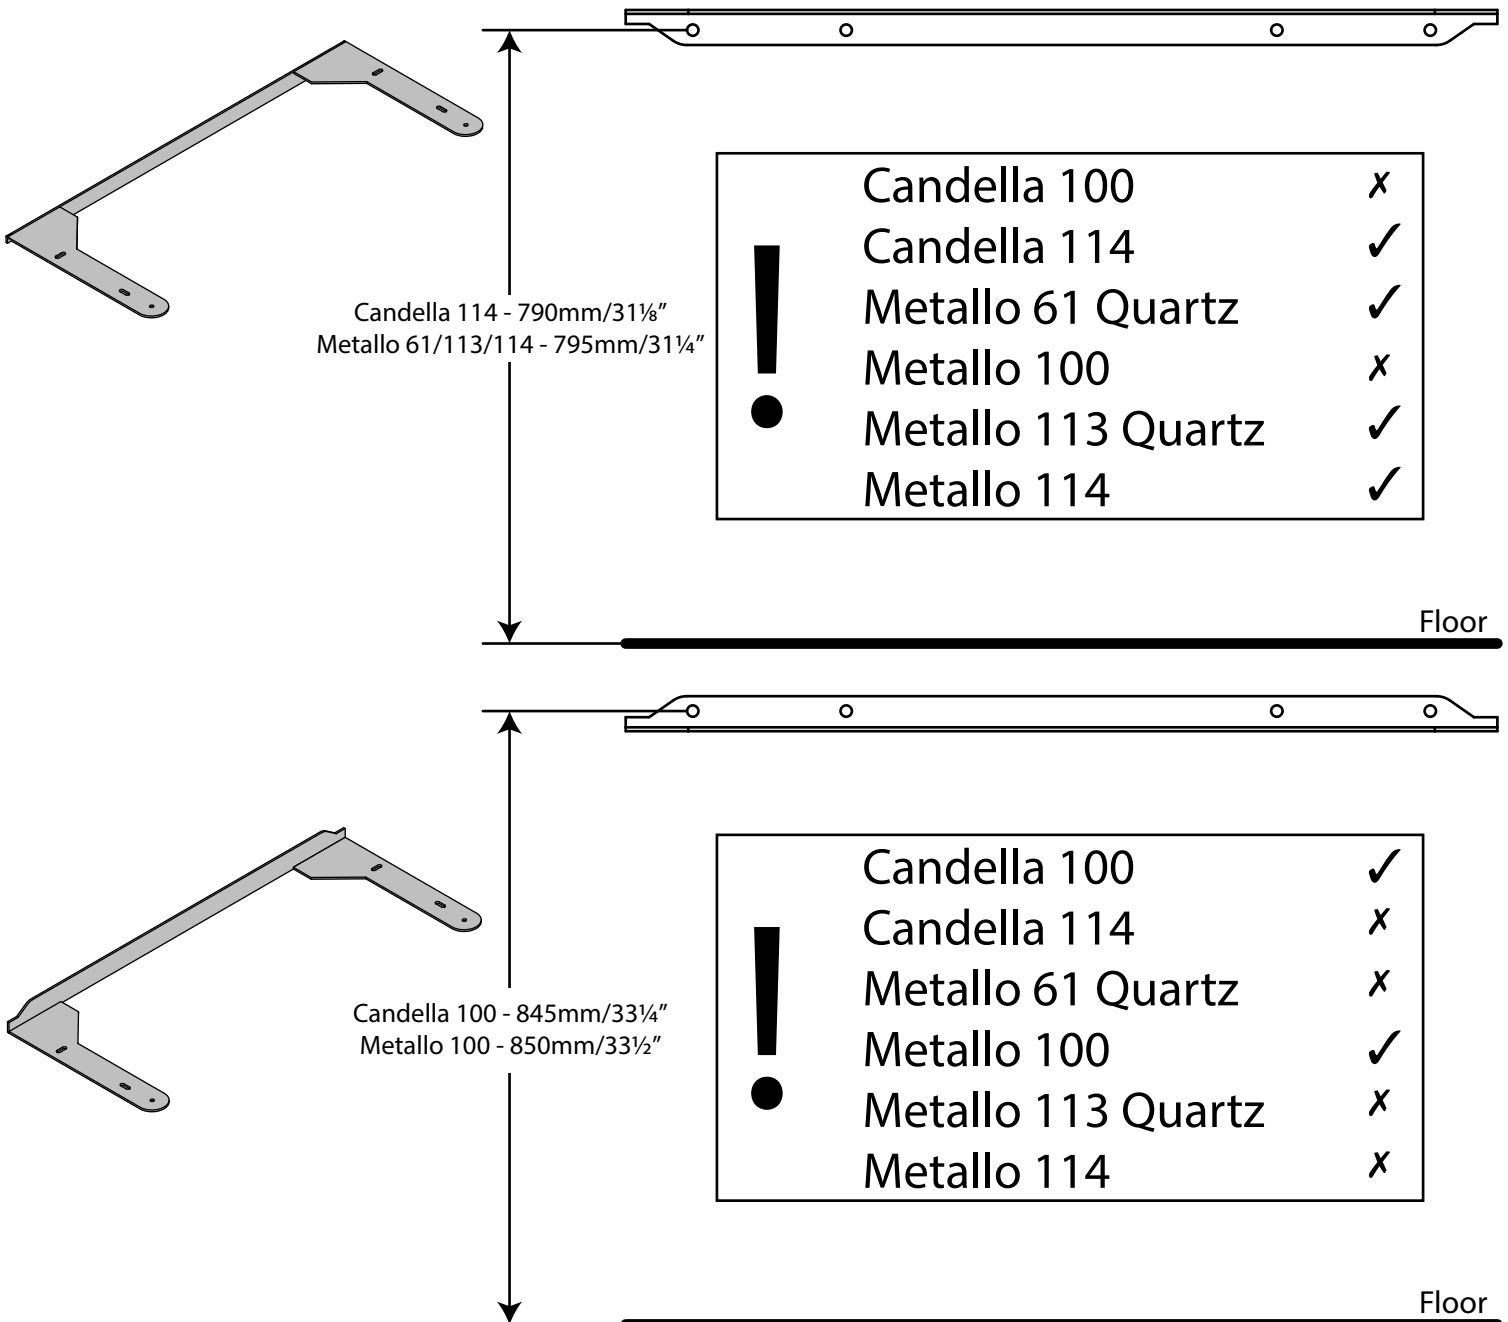


*Dimensions subject to 3% tolerance, check actual product

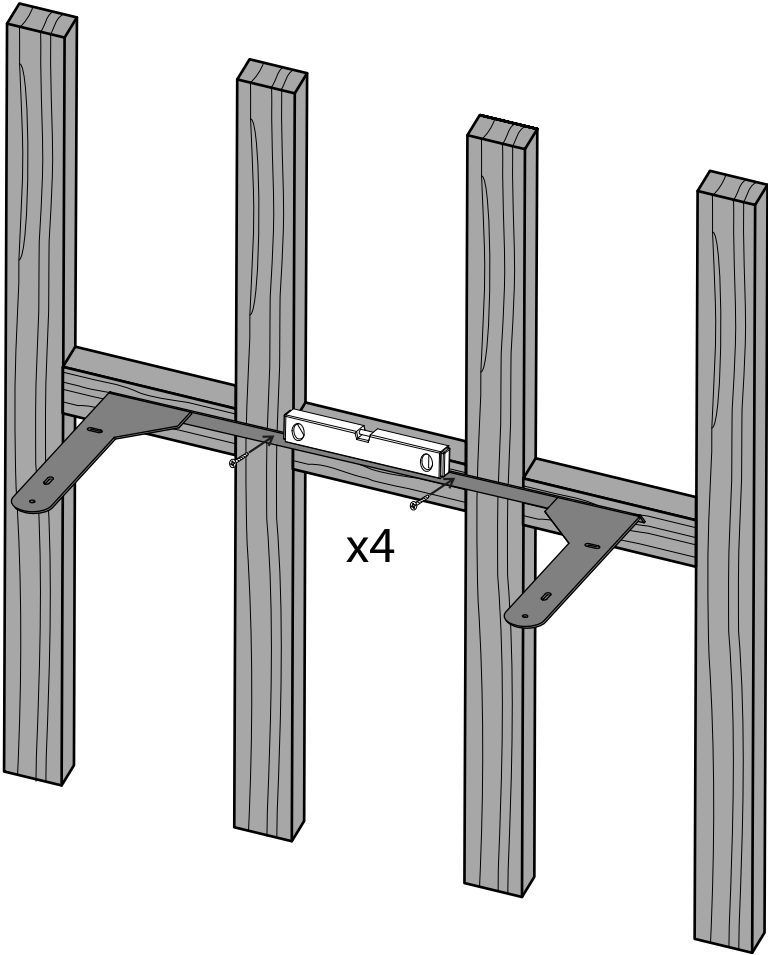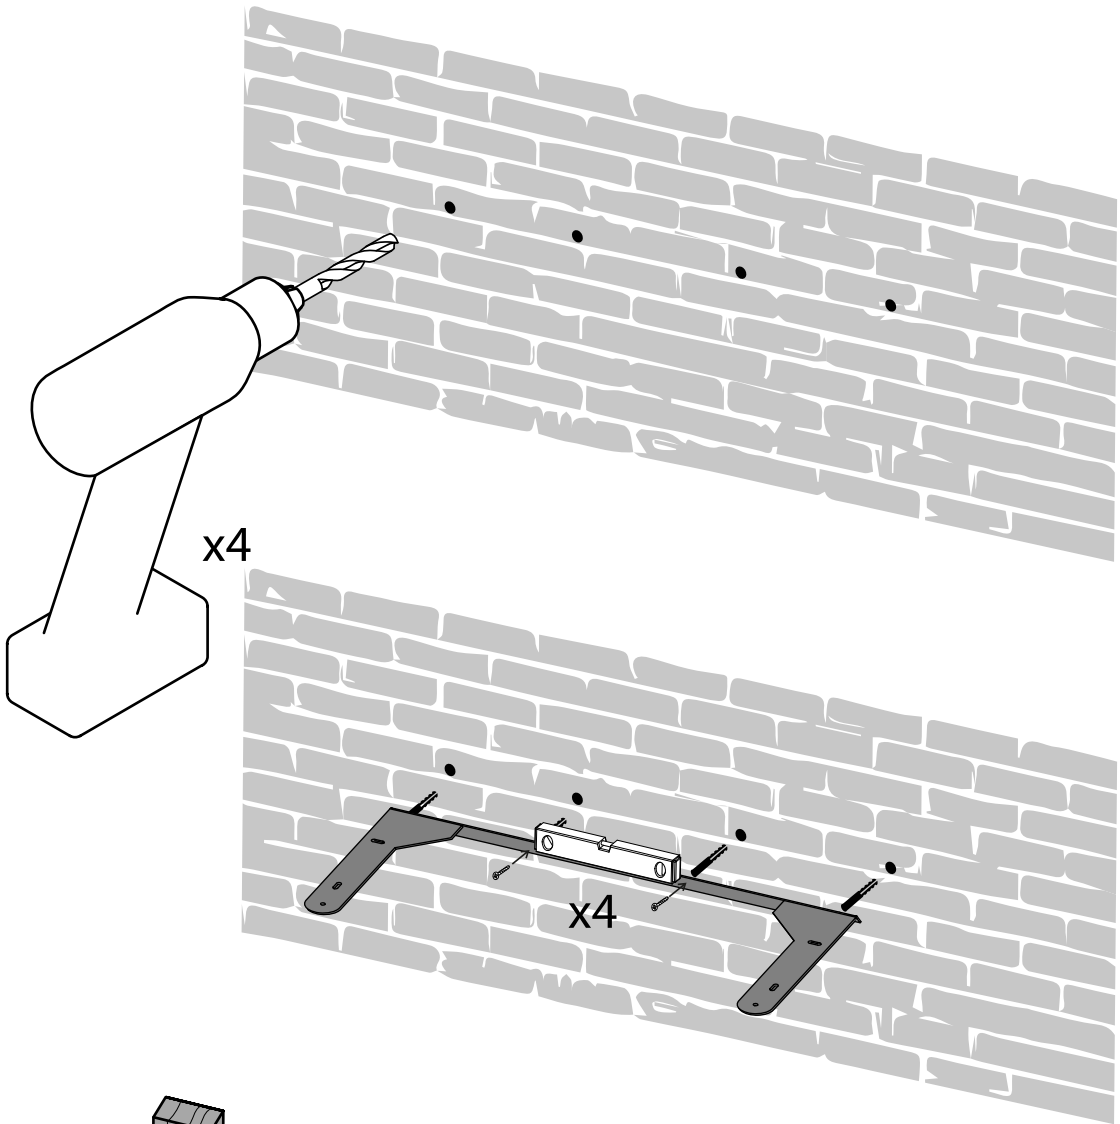









Candella 100/114



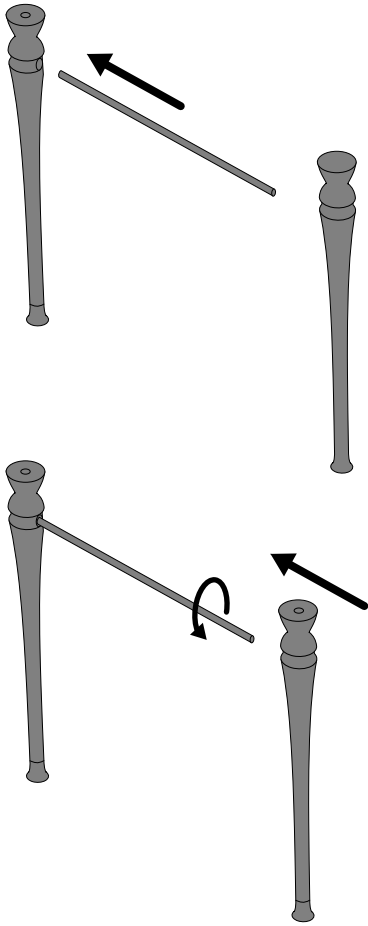


Metallo 100/114 Metallo 113 Quartz






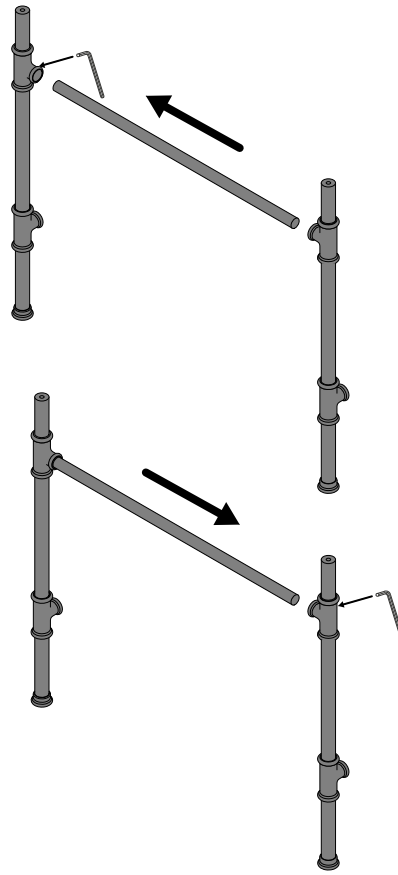


Metallo 61 Quartz

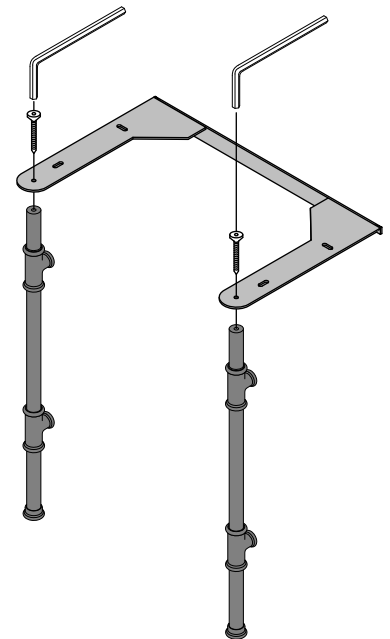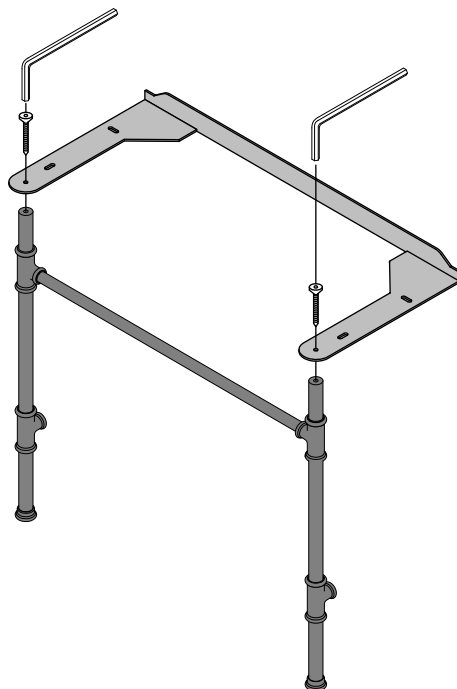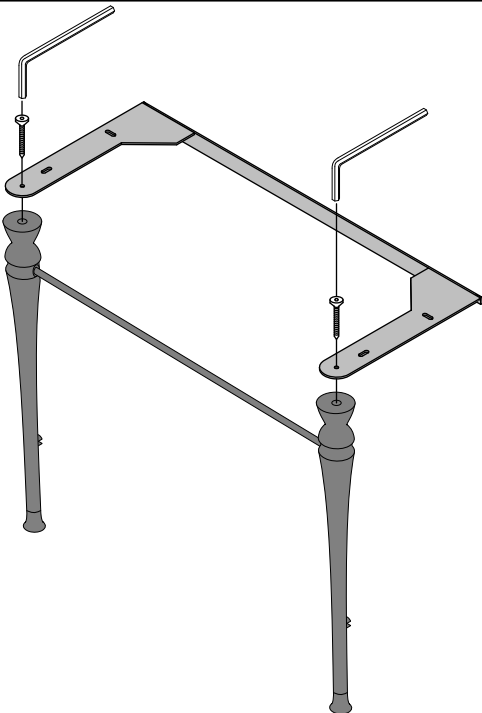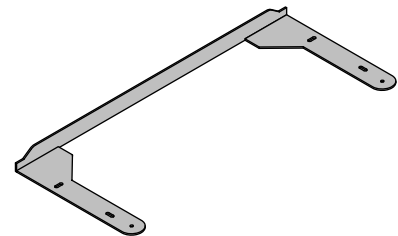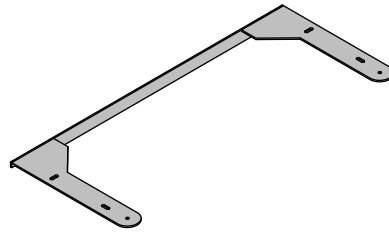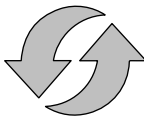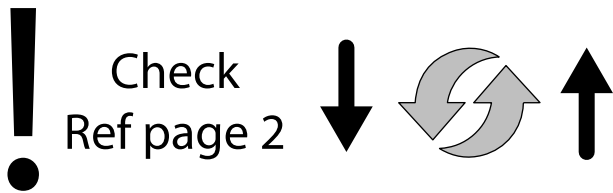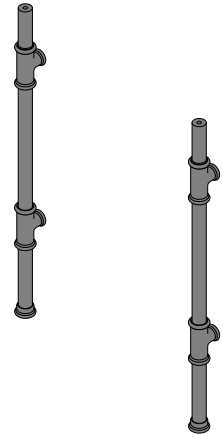


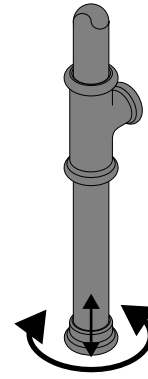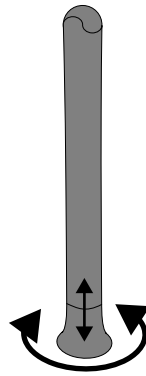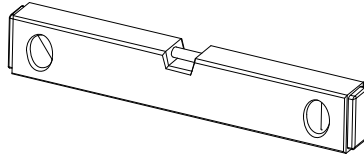




*Dimensions subject to 3% tolerance, check actual product

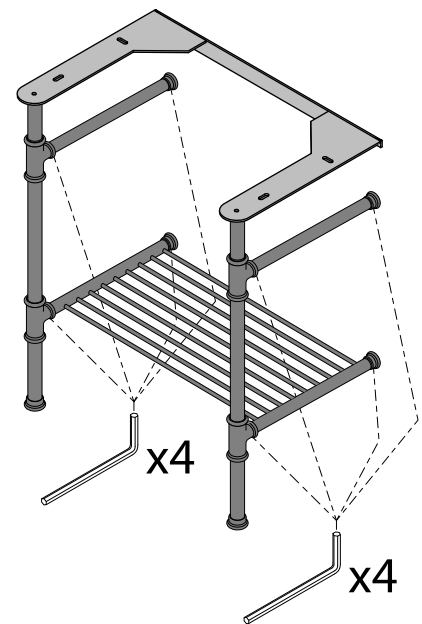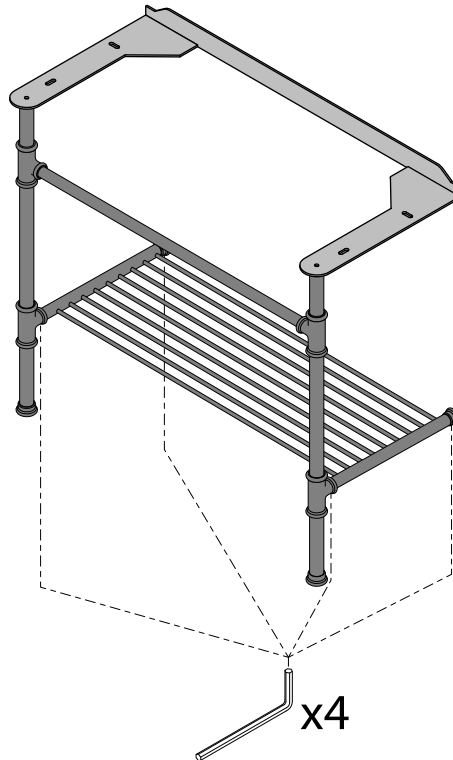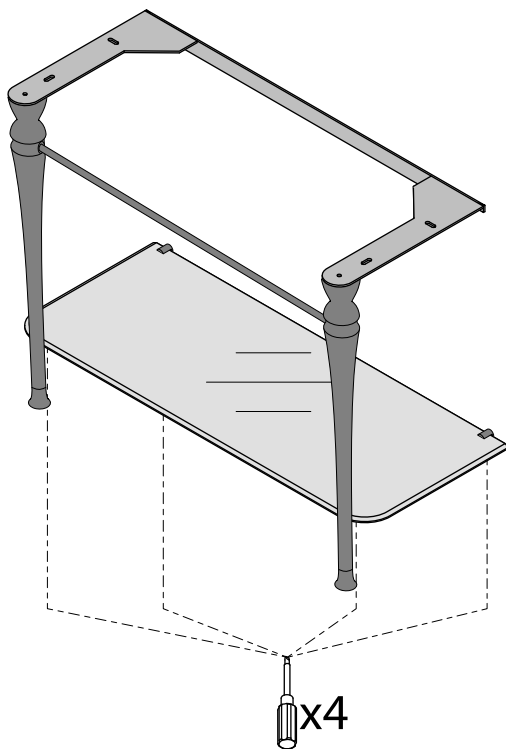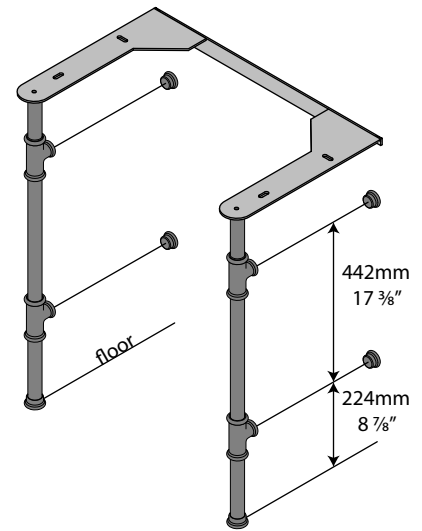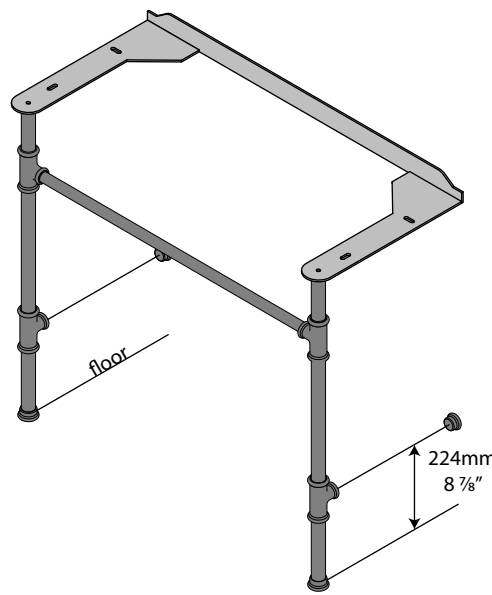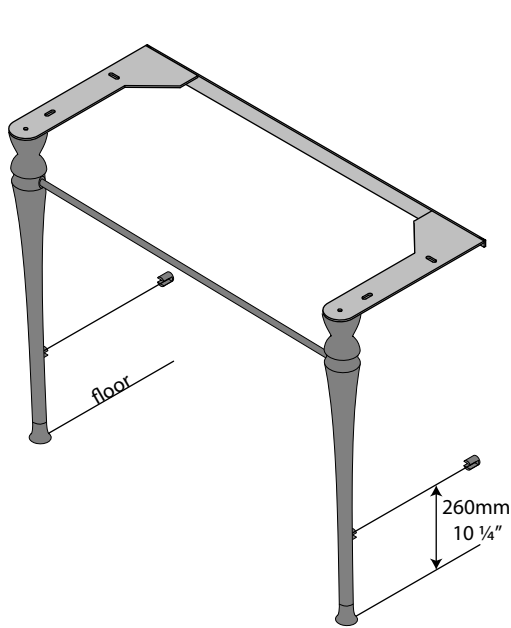

Metallo/Candella 100 (Metallo 100 shown)

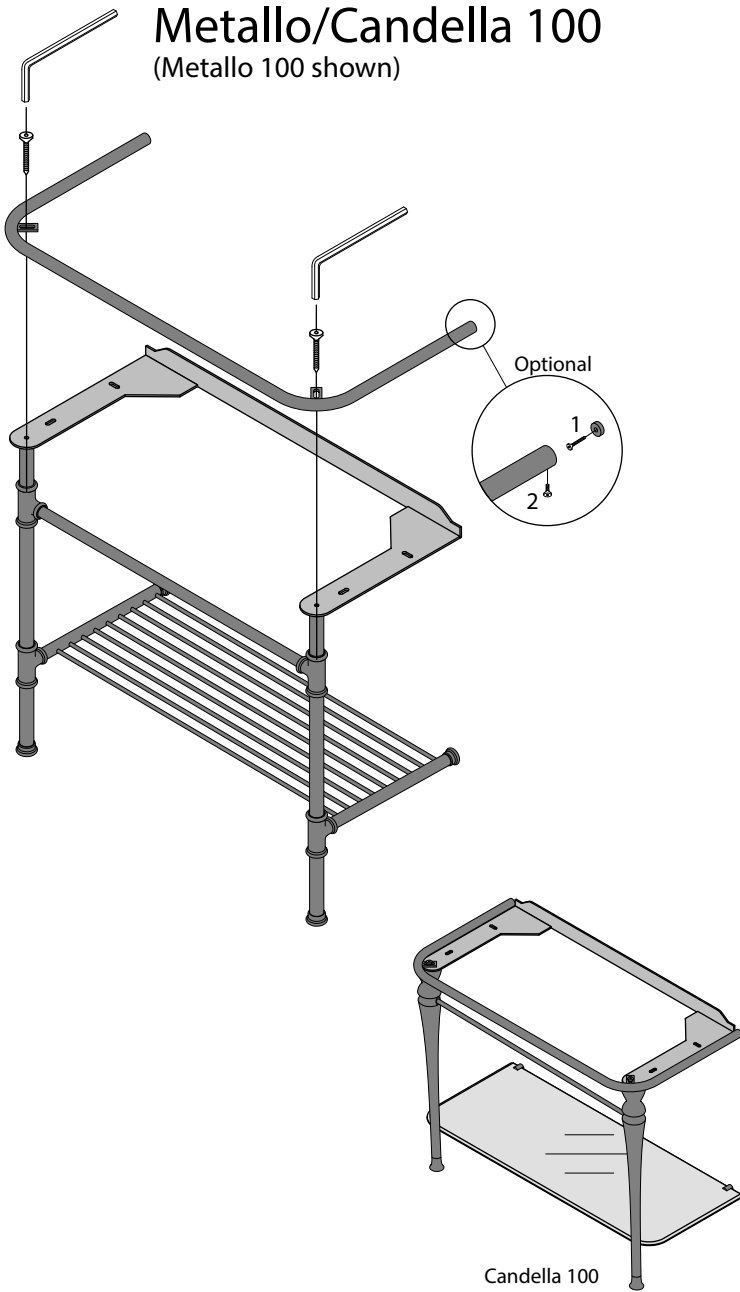


Candella/Metallo 114 (Candella 114 shown)



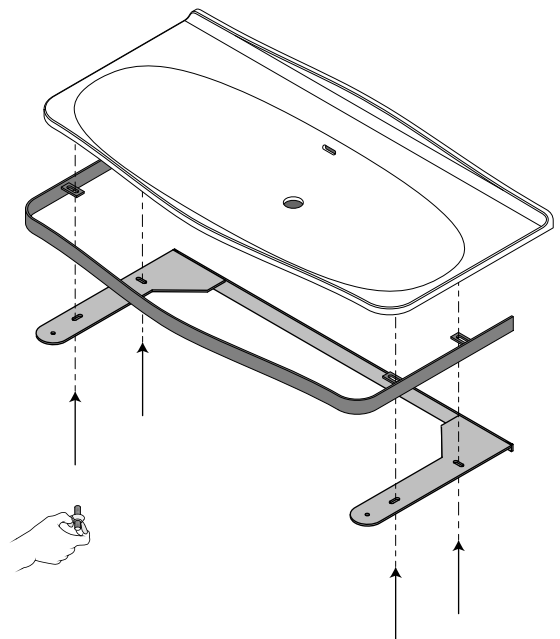
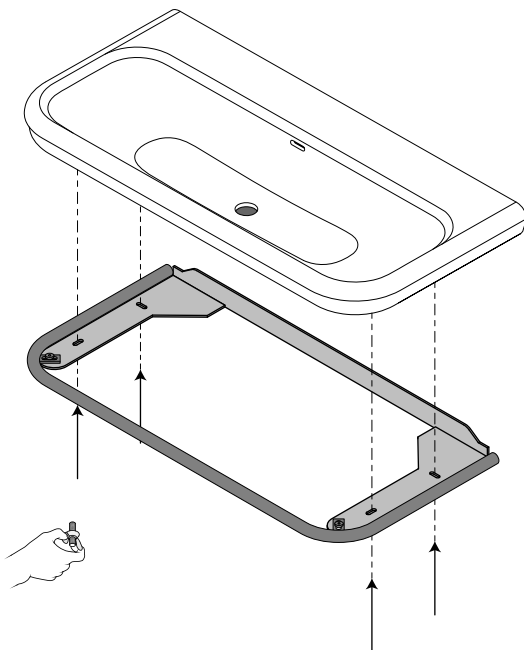
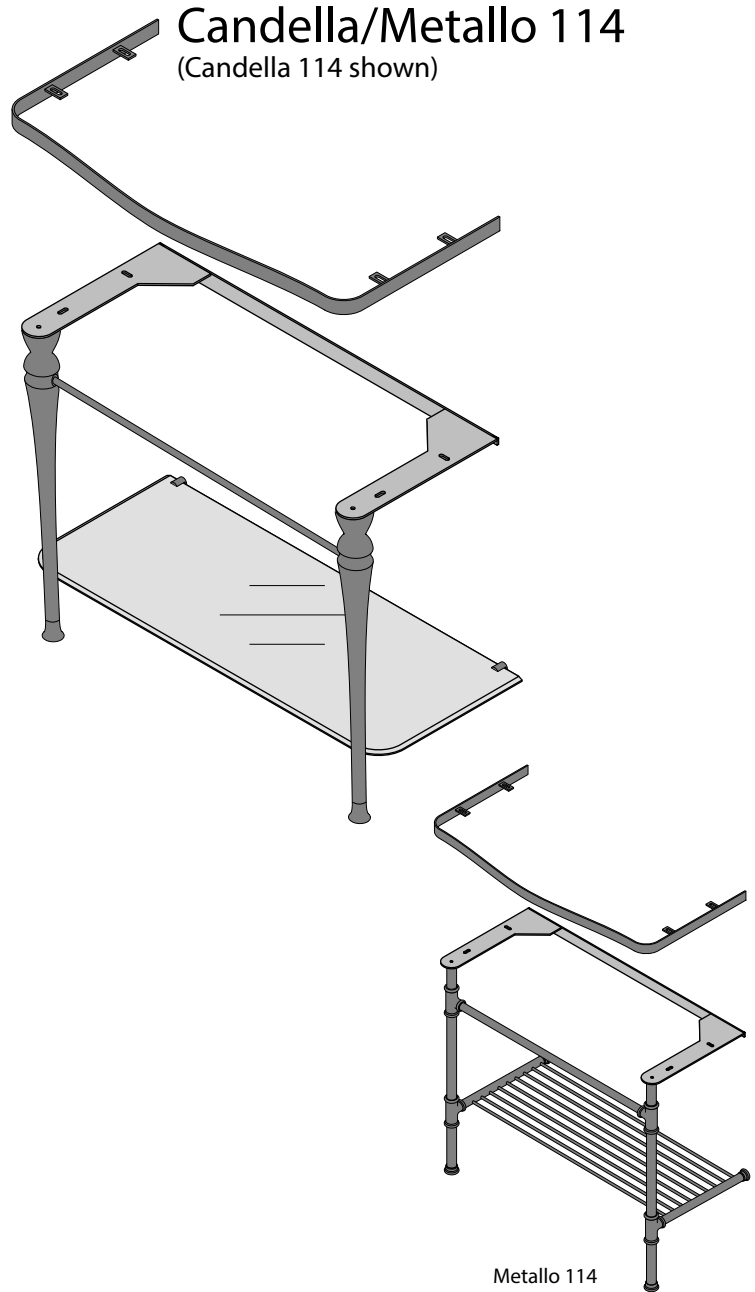


*See basin fitting instructions



Metallo 113 Quartz

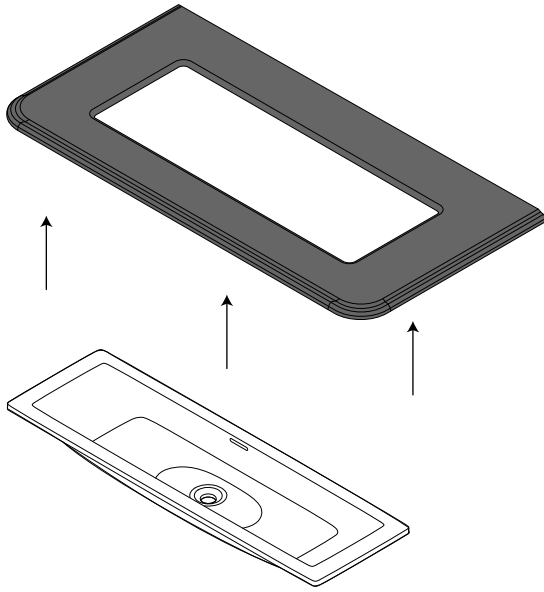


Metallo 61 Quartz

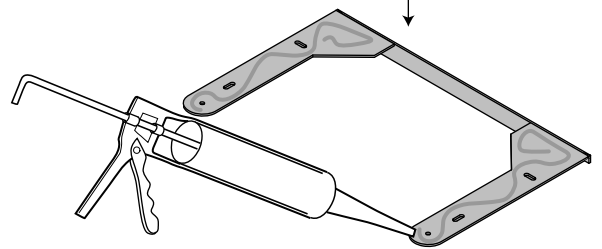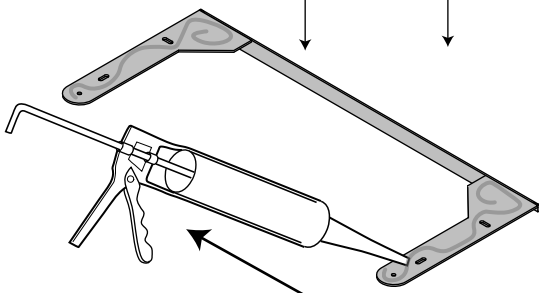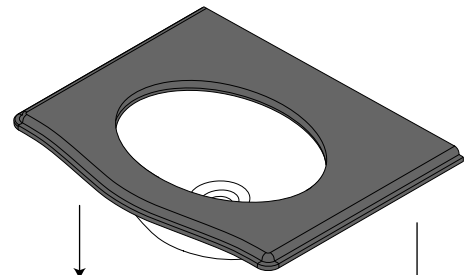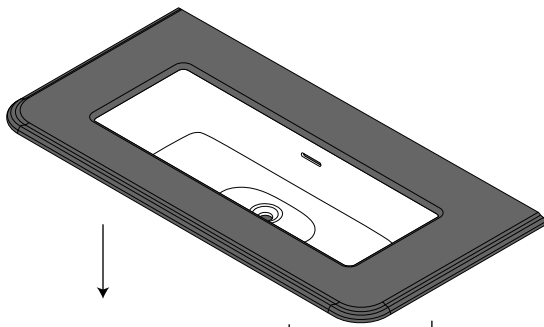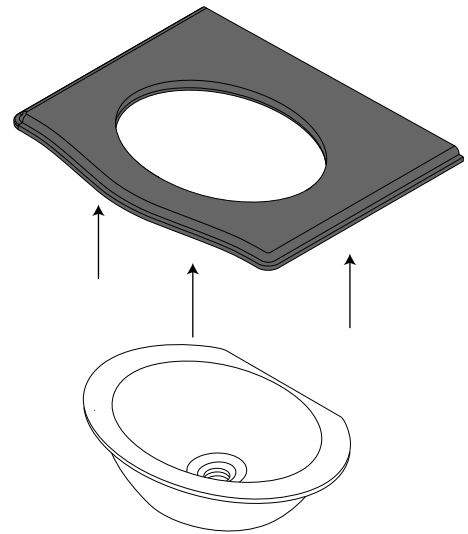


Silicon Based Adhesive
(Not supplied)

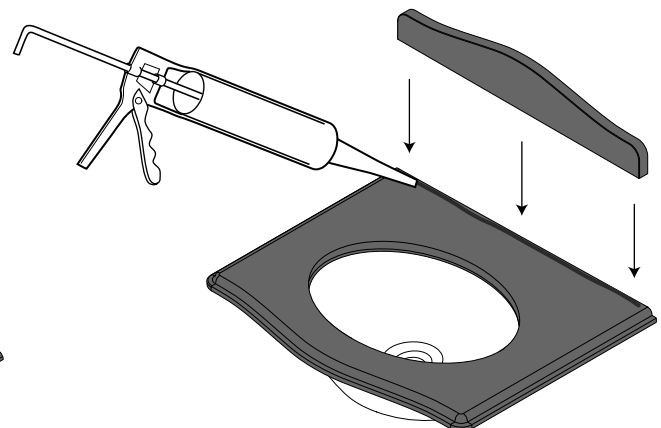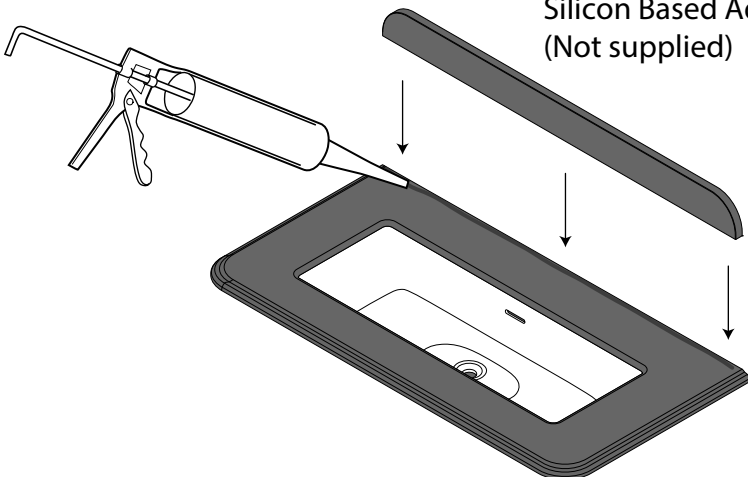


Candella 114

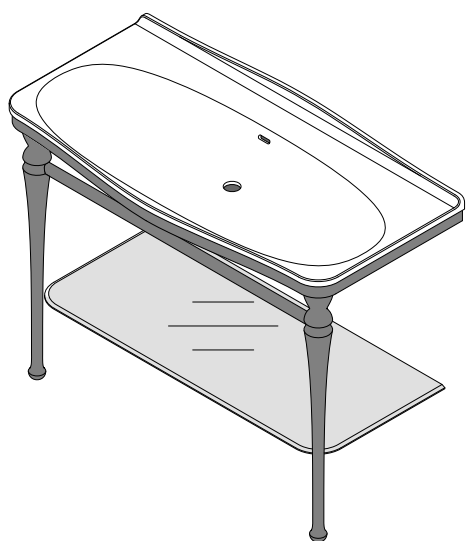

Metallo 114

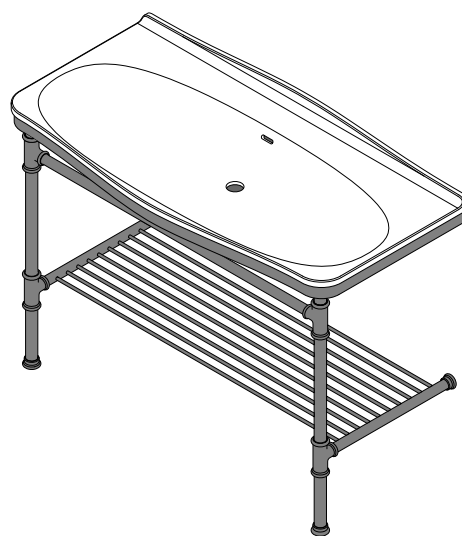


Candella 100

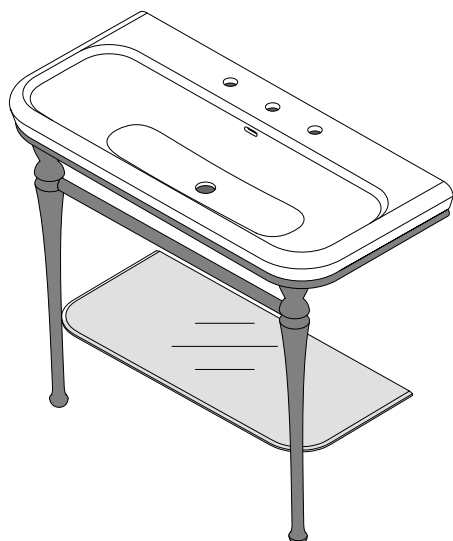

Metallo 100



Metallo 113 Quartz

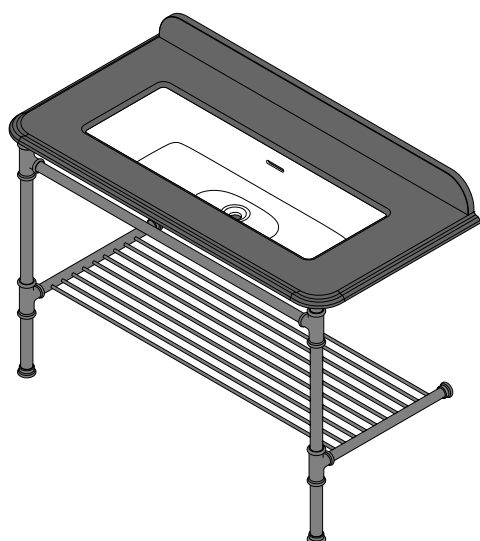

Metallo 61 Quartz

